RF Modulator

USER'S MANUAL

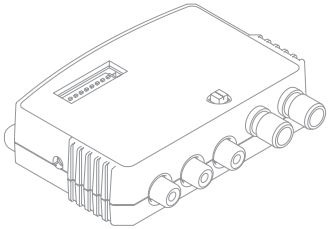

BEFORE OPERATING THE UNIT,
PLEASE READ THIS MANUAL THOROUGHLY

RF Modulator

USER'S MANUAL 6060404014-10

SAFETY INFORMATION

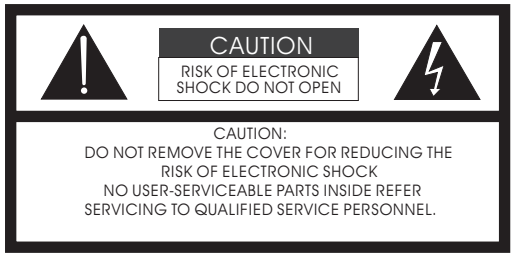

WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Safety term and Symbols

Warning: Warning statements identify conditions or practices that could result in injury or loss of life.

Caution: Caution statements identify conditions or practices that could result in damage to this product or other property.

Danger: Do not remove the cover for reducing the risk of electric shock.

IMPORTANT SAFETY INSTRUCTIONS

1. All the safety and operating instructions should be read before the product is operated.
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for the cleaning.
6. Do not use attachments not recommended by the products manufacturer if they may cause hazards.
7. Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool; and the like.
8. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type or power supply to your home, consult your product dealer or local Power Company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
10. Power supply cord should be routed so that are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, or other sources, refer to the operating instructions.
11. For added protection for this product during a lightning storm, or it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect cable system. This will prevent damage to the product due to lightning and powerline surges.
12. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electronic shock. Never spill liquid of any kind on the product.
13. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
14. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid have been spilled, or objects have fallen into the products.
- If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore this product to its normal operation.

- If the products has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance - this indicates a need for service.

15. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

16. Upon completion of any service or repair to this product, ask the service technician to perform safety checks to determine that the product is in proper operating conditions.

17. The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products including amplifiers that produce heat.

Table of Contents

1 Introduction 1
- 1.1 Overview 1
- 1.2 Main Features 1
- 1.3 Applications 1
- 1.4 Specification 2

2 Check package before use 3

3 Controls 3

4 Installation and Operation 5
- 4.1 Work with VCD/DVD players 5
- 4.2 Work with Satellite Receiver 6
- 4.3 Connect the second load when AV source just has one output 7
- 4.4 Dual power sources 8
- 4.5 Channel selection 8
- 4.6 How to check channel selected ... 8

5 Trouble Shooting 9
- 5.1 No picture or sound 9
- 5.2 The brightness of image abnormal 9
- 5.3 Interference the adjacent channels 9
- 5.4 LNB can not work properly 9
- 5.5 Distortion of sound 9

6 Channel Lists 9
- 6.1 Table of European Channels 10
- 6.2 Table of Australian Channels 13
- 6.3 Table of South Africa Channels 17

❶ Introduction

1.1 Overview

This stereo/mono RF modulator is a programmable modulator which generates an RF TV channel from a baseband video and audio signal. It is the practical solution of building your home AV network. It can use current cable network in the house to transmit a good quality video and audio to another room.

1.2 Main Features

- PAL I for mono or PAL B/G for stereo
- Dip switch channel selector
- High output power up to 82dBμV
- Dual input power source

1.3 Applications

- Home AV network
- Hotel local TV program system

1.4 Specification

Item	Specification
Standard	PAL I or PAL B/G
Frequency Range	UHF: 470~862MHz VHF: 126~300MHz **Europe:** Ch. 21 ~69 Ch. S4~S20, E5~E12 **Australia:** Ch. 21 ~69 Ch. S4 ~ S20, 6~12 **South Africa:** Ch. 21~61 Ch. 4 ~ 13
Output Power	82/72dBμV (Typical)
Harmonic	>55dBc
Third distortion	>58dBc
Isolation	>20dBc
Insertion loss	<1.5dB@800MHz <4.0dB@2.3GHz
Audio carrier frequency	PAL I : 5.5MHz PAL B/G: 5.5, 5.742MHz
Audio frequency response	50-15KHz
Audio input level	1.7 Vpp max.
Separation	>20dB (Typical) (test frequency:1KHz/1.7Vpp)
Current consumption	110mA
Input power	DC 9V/300mA for adaptor. 13/18V for satellite receiver
Power adaptor	DC 9V / 300mA
Operating Temperature	0℃ ~ 50℃
Dimension(mm)	85.8(L)X68.4(W)X21.3(H)

◎ Specification subject to change without prior notice.

❷ Check package before use

1. RF Modulator X 1 
2. Power Adaptor X 1
3. SCART to RCA Adaptor X 1 

❸ Controls

Rear View

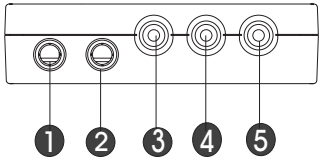

1. RF +1 ch output
2. RF input
3. Video Input
4. Audio Left
5. Audio Right

Bottom View

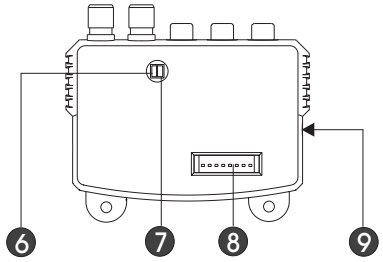

6. Left: DC source switch (DC jack power supply only if you remove the jumper)
7. Right: Video loaded jumper (unplug when using video splitter)

⚠ Caution:

Do not plug the jumpers horizontally for avoiding any damage in Set-top Box.

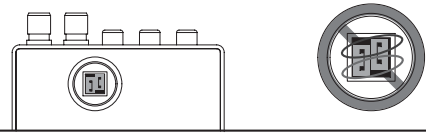

8. Channel switch: sw1 to sw7 for channel switch, sw8 for test pattern on/off (if sw8 is on, there will be two white bar on TV screen on the channel that you selected. sw9 for high / low power.
9. DC jack

4 Installation and Operation

4.1 Work with VCD/DVD players.

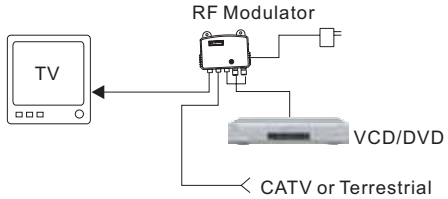

Figure 1.

1. Turn off all A/V equipments power.
2. Connect RF modulator and VCD/DVD players by A/V cable.
3. To connect RF modulator, Television and RF sources by coaxial cable.
4. Connect power adaptor with RF modulator and plug it into power socket.
5. Turn on the A/V source and television.
6. Set up the RF Modulator on the empty channel.
   Please refer to "4.5 Channel selection"

4.2 Work with Satellite Receiver.

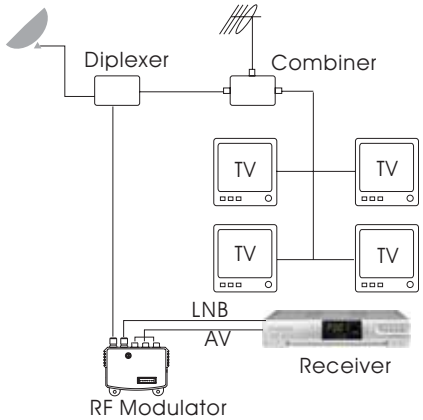

Figure 2.

1. Turn off all A/V equipments power.
2. Connect RF modulator and satellite receiver by A/V cable.
3. To connect RF modulator, Television or Diplexer by coaxial cable.
4. Satellite receiver can supply power, no extra power needed by RF Modulator.
5. Turn on the A/V source and television.
6. Set up the RF Modulator on the empty channel.
   Please refer to "4.5 Channel selection"

4.3 Connect the second load when AV source has just one output

This RF Modulator offers an extended loop through function. Satellite receiver can transmit program to the TV beside it through AV cable with high quality AV signal, and it can also transmit the program to the other rooms through the RF modulator.

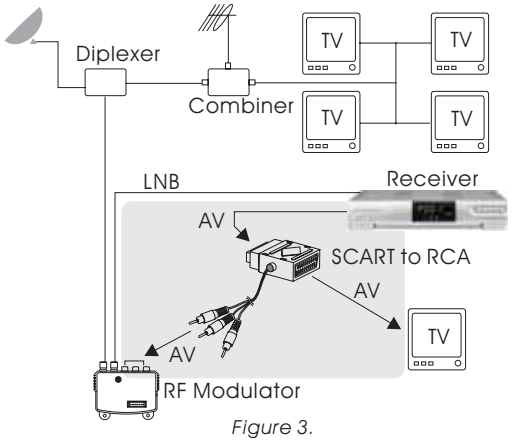

Figure 3.

1. Turn off all A/V equipments power.
2. Connect RF modulator , television and satellite receiver by SCART to RCA Adaptor .(refer to Figure 3.)
3. Remove jumper 7.
4. To connect RF modulator, satellite receiver or Diplexer by coaxial cable.
5. Satellite receiver can supply power, no extra power needed by RF Modulator.
   Please refer to "4.4 Dual power sources".

6. Turn on the A/V source and television.
7. Set up the RF Modulator on the empty channel.
   Please refer to "4.5 Channel selection"

4.4 Dual power sources

The RF Modulator can use the power from adaptor or satellite receiver. If you connect to both power source at same time, the higher one will be used (normally, the DC power from satellite receiver will be 13/18V, the adaptor is 9V). Remove the jumper 6 can force the modulator using the power from Power Adaptor.

4.5 Channel selection

This RF modulator is designed in double side band modulation that occupies two channel space. The program you are going to have in your home network should be placed at the higher channel of at least two continuous empty channels, and it is better to set program on the middle of three continuous empty channel.

4.6 How to check channel selected

This RF Modulator offers an internal video test pattern- if you switch sw8 to 1, and TV screen shows up black and white bars, that is you have gotten the correct channel.

E5:11010010



Internal video test pattern

5 Trouble Shooting

5.1 No picture or sound

- Check all the cables well and connected rightly.
- Check the channels correctly set up. Please refer to "4.6 How to check channel selected".

5.2 The brightness of image abnormal

- Too light: Check jumper 7 plug rightly
- Too dark: Check jumper 7 removed if there is other loading or it is connecting with TV.

5.3 Interfere the adjacent channels:

- Re-set up the program to other empty channel.
  Please refer to "4.5 Channel Selection".

5.4 LNB can not work properly

- Remove jumper 6 and plug power adaptor to force RF modulator consuming power from socket outlet instead of that from satellite receiver.

5.5 Distortion of sound

- Turn down the volume of AV source.

6 Channel Lists

Adjust Dip switch to get the channel.

E5:11010010



E6:00110010



6.1 Table of European Channels

Channel		Video carrier	Switch position 12345678
	A	53.75	11100010
	E2	48.25	00010010
	E3	55.25	10010010
	E4	62.25	01010010
▲	E5	175.25	11010010
▲	E6	182.25	00110010
▲	E7	189.25	10110010
▲	E8	196.25	01110010
▲	E9	203.25	11110010
▲	E10	210.25	00001010
▲	E11	217.25	10001010
▲	E12	224.25	01001010
	S1	183.75	10000000
	S2	192.25	01000000
	S3	201.25	11000000
▲	S4	126.25	00100000
▲	S5	133.25	10100000
▲	S6	140.25	01100000
▲	S7	147.25	11100000
▲	S8	154.25	00010000
▲	S9	161.25	10010000
▲	S10	168.25	01010000
▲	S11	231.25	11010000
▲	S12	238.25	00110000
▲	S13	245.25	10110000
▲	S14	252.25	01110000
▲	S15	259.25	11110000

▲ Frequency range:126-300MHz

Channel		Video carrier	Switch position 12345678
▲	S16	266.25	00001000
▲	S17	273.25	10001000
▲	S18	280.25	01001000
▲	S19	287.25	11001000
▲	S20	294.25	00101000
●	21	471.25	10101000
●	22	479.25	01101000
●	23	487.25	11101000
●	24	495.25	00011000
●	25	503.25	10011000
●	26	511.25	01011000
●	27	519.25	11011000
●	28	527.25	00111000
●	29	535.25	10111000
●	30	543.25	01111000
●	31	551.25	11111000
●	32	559.25	00000100
●	33	567.25	10000100
●	34	575.25	01000100
●	35	583.25	11000100
●	36	591.25	00100100
●	37	599.25	10100100
●	38	607.25	01100100
●	39	615.25	11100100
●	40	623.25	00010100
●	41	631.25	10010100
●	42	639.25	01010100

▲ Frequency range:126-300MHz

Channel		Video carrier	Switch position 12345678
●	43	647.25	11010100
●	44	655.25	00110100
●	45	663.25	10110100
●	46	671.25	01110100
●	47	679.25	11110100
●	48	687.25	00001100
●	49	695.25	10001100
●	50	703.25	01001100
●	51	711.25	11001100
●	52	719.25	00101100
●	53	727.25	10101100
●	54	735.25	01101100
●	55	743.25	11101100
●	56	751.25	00011100
●	57	759.25	10011100
●	58	767.25	01011100
●	59	775.25	11011100
●	60	783.25	00111100
●	61	791.25	10111100
●	62	799.25	01111100
●	63	807.25	11111100
●	64	815.25	00000010
●	65	823.25	10000010
●	66	831.25	01000010
●	67	839.25	11000010
●	68	847.25	00100010
●	69	855.25	10100010

● Frequency range: 470-860MHz

6.2 Table of Australian Channels

Channel		Video carrier	Switch position 12345678
▲	S4	126.25	01010010
▲	S5	133.25	11010010
▲	S6	140.25	00110010
▲	S7	147.25	10110010
▲	S8	154.25	01110010
▲	S9	161.25	11110010
▲	S10	168.25	00001010
▲	S11	231.25	10001010
▲	S12	238.25	01001010
▲	S13	245.25	11001010
▲	S14	252.25	00101010
▲	S15	259.25	10101010
▲	S16	266.25	01101010
▲	S17	273.25	11101010
▲	S18	280.25	00011010
▲	S19	287.25	10011010
▲	S20	294.25	01011010
	S21	303.25	11011010
	S22	310.25	00111010
	S23	317.25	10111010
	S24	324.25	01111010
	S25	331.25	11111010
	S26	338.25	00000110
	S27	345.25	10000110
	S28	352.25	01000110
	S29	359.25	11000110
	S30	366.25	00100110

▲ Frequency range:126-300MHz

Channel		Video carrier	Switch position 12345678
	S31	373.25	10100110
	S32	380.25	01100110
	S33	387.25	11100110
	S34	394.25	00010110
	S35	401.25	10010110
	S36	408.25	01010110
	S37	415.25	11010110
	S38	422.25	00110110
	S39	429.25	10110110
	S40	436.25	01110110
	S41	443.25	11110110
▲	6	175.25	01100000
▲	7	182.25	11100000
▲	8	189.25	00010000
▲	9	196.25	10010000
▲	10	209.25	01010000
▲	11	216.25	11010000
▲	12	224.25	00110000
●	21	478.25	10101000
●	22	485.25	01101000
●	23	492.25	11101000
●	24	499.25	00011000
●	25	506.25	10011000
●	26	513.25	01011000
●	27	520.25	11011000
●	28	527.25	00111000
●	29	534.25	10111000

● Frequency range: 470-860MHz

Channel		Video carrier	Switch position
			12345678
●	30	541.25	01111000
●	31	548.25	11111000
●	32	555.25	00000100
●	33	562.25	10000100
●	34	569.25	01000100
●	35	576.25	11000100
●	36	583.25	00100100
●	37	590.25	10100100
●	38	597.25	01100100
●	39	604.25	11100100
●	40	611.25	00010100
●	41	618.25	10010100
●	42	625.25	01010100
●	43	632.25	11010100
●	44	639.25	00110100
●	45	646.25	10110100
●	46	653.25	01110100
●	47	660.25	11110100
●	48	667.25	00001100
●	49	674.25	10001100
●	50	681.25	01001100
●	51	688.25	11001100
●	52	695.25	00101100
●	53	702.25	10101100
●	54	709.25	01101100
●	55	716.25	11101100
●	56	723.25	00011100

Channel		Video carrier	Switch position
			12345678
●	57	730.25	10011100
●	58	737.25	01011100
●	59	744.25	11011100
●	60	751.25	00111100
●	61	758.25	10111100
●	62	765.25	01111100
●	63	772.25	11111100
●	64	779.25	00000010
●	65	786.25	10000010
●	66	793.25	01000010
●	67	800.25	11000010
●	68	807.25	00100010
●	69	814.25	10100010

● Frequency range: 470-860MHz

6.3 Table of South Africa Channels

Channel		Video carrier	Switch position 12345678
▲	4	175.25	01010010
▲	5	183.25	11010010
▲	6	110.25	00110010
▲	7	199.25	10110010
▲	8	207.25	01110010
▲	9	215.25	11110010
▲	10	223.25	00001010
▲	11	231.25	10001010
▲	13	247.425	11001010
●	21	471.25	10101000
●	22	479.25	01101000
●	23	487.25	11101000
●	24	495.25	00011000
●	25	503.25	10011000
●	26	511.25	01011000
●	27	519.25	11011000
●	28	527.25	00111000
●	29	535.25	10111000
●	30	543.25	01111000
●	31	551.25	11111000
●	32	559.25	00000100
●	33	567.25	10000100
●	34	575.25	01000100
●	35	583.25	11000100
●	36	591.25	00100100
●	37	599.25	10100100
●	38	607.25	01100100

▲ Frequency range:126-300MHz

Channel		Video carrier	Switch position 12345678
●	39	615.25	11100100
●	40	623.25	00010100
●	41	631.25	10010100
●	42	639.25	01010100
●	43	647.25	11010100
●	44	655.25	00110100
●	45	663.25	10110100
●	46	671.25	01110100
●	47	679.25	11110100
●	48	687.25	00001100
●	49	695.25	10001100
●	50	703.25	01001100
●	51	711.25	11001100
●	52	719.25	00101100
●	53	727.25	10101100
●	54	735.25	01101100
●	55	743.25	11101100
●	56	751.25	00011100
●	57	759.25	10011100
●	58	767.25	01011100
●	59	775.25	11011100
●	60	783.25	00111100
●	61	791.25	10111100

● Frequency range: 470-860MHz